

Door Assembly Replacement Instructions

! WARNING *Risk of Fire or Electric Shock*

- Turn power off at main panel before servicing this switch or the equipment it controls.
- More than one disconnect switch may be required to de-energize the equipment before servicing.

NOTICE

Before removing the door assembly cable connections, backup the ET90000 schedule programs onto a USB device. Failure to do so will result in program loss. If programs are lost, refer to the ET90000 Electronic Time Installation and Programming Guide for programming instructions.

Follow this procedure to replace the ET90000 Time Switch door assembly.

1. Make sure power to the ET90000 Time Switch is de-activated.
2. Open the time switch enclosure cabinet door.
3. Remove the screws on the deadfront and remove the deadfront from the enclosure. Set aside the deadfront and screws for reuse.

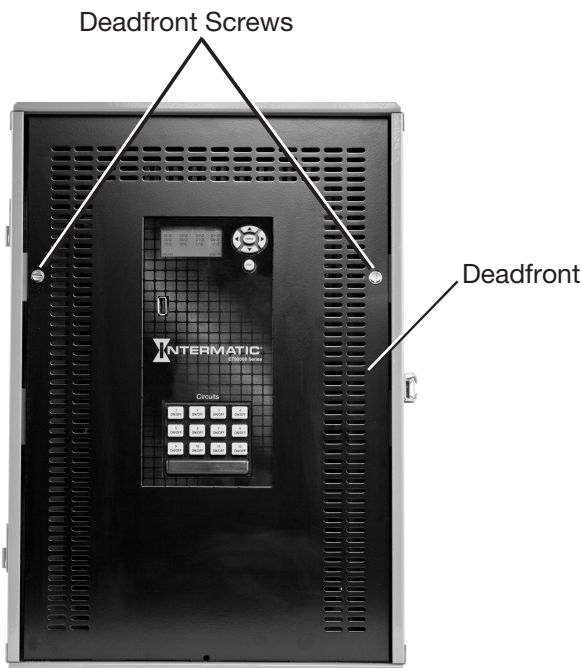


Figure 1. Removing the deadfront.

4. Remove the screw that secures the time switch door assembly and open the door assembly. Set aside the screws for re-use.

5. On the inside of the door assembly, disconnect the applicable cable and connectors from the controller board listed below. See Figure 2
 - Relay module cable connectors
 - Ethernet cable
 - CAN bus connector wires
 - Remote input connector wires
 - Power supply cable

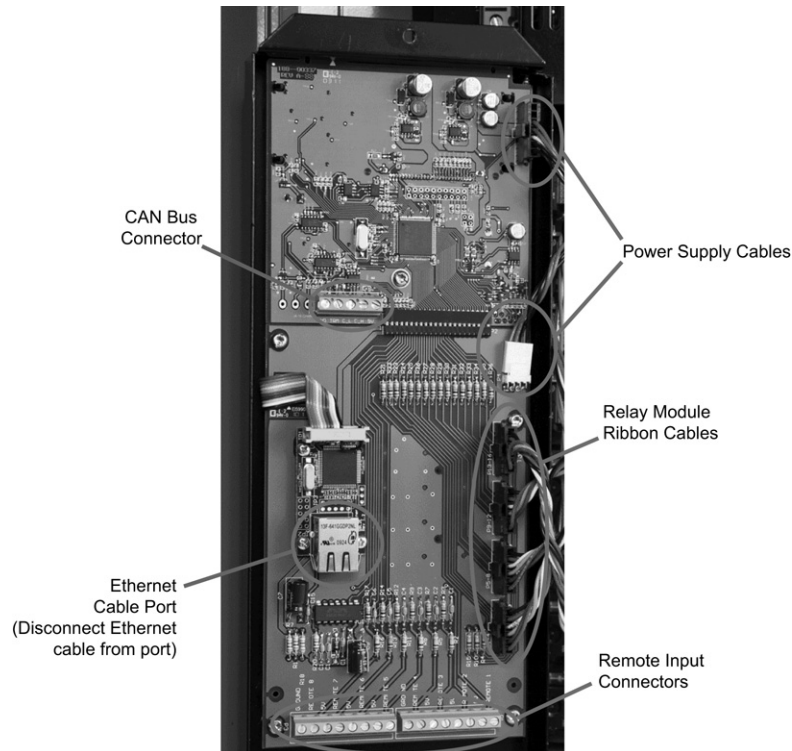


Figure 2. Removing wires and connectors.

6. Remove the top hinge screw from the top of the door assembly. Retain the screw for reuse.
7. Lift up the assembly until it clears the bottom hinge support, and then lift the assembly off the pin.
8. Locate the bottom hinge pin and guide the bottom hinge hole on the new door assembly onto the pin.
9. Align the door assembly with the top hinge support and secure with the screw previously removed in step 6.
10. Open the door assembly and connect the cables and connectors previously removed to the required locations. Refer to Figure 2.
11. Close the door assembly and secure with the screw previously removed in step 4.
12. Re-install the deadfront and secure with the screws previously removed in step 3.
13. Apply power to the unit.
14. Re-install program data from the USB device previously used to backup the software.
15. Close the enclosure cabinet door.

LIMITED ONE YEAR WARRANTY

If within the warranty period specified, this product fails due to a defect in material or workmanship, Intermatic Incorporated will repair or replace it, at its sole option, free of charge. This warranty is extended to the original purchaser only and is not transferable. This warranty does not apply to: (a) damage to units caused by accident, dropping or abuse in handling, acts of God or any negligent use; (b) units which have been subject to unauthorized repair, opened, taken apart or otherwise modified; (c) units not used in accordance with instructions; (d) damages exceeding the cost of the product; (e) sealed lamps and/or lamp bulbs, LED's and batteries; (f) the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear; (g) transit damage, initial installation costs, removal costs, or reinstallation costs.

INTERMATIC INCORPORATED WILL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES. ALL IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY AND THE WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY MODIFIED TO EXIST ONLY AS CONTAINED IN THIS LIMITED WARRANTY, AND SHALL BE OF THE SAME DURATION AS THE WARRANTY PERIOD STATED ABOVE. SOME STATES DO NOT ALLOW LIMITATIONS ON THE DURATION OF AN IMPLIED WARRANTY, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

This warranty service is available by either (a) returning the product to the dealer from whom the unit was purchased, or (b) completing a warranty claim on line at www.intermatic.com. This warranty is made by: Intermatic Incorporated, Customer Service 7777 Winn Rd. Spring Grove, Illinois 60081-9698. For warranty service go to: <http://www.intermatic.com> or call 815-675-7000.